

POWERBANK WITH LIGHT

INSTRUCTION MANUAL



Electrical conducts

- To reduce the risk of electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.
- Disconnect with power or USB cable if not in use.
- Use a qualified adapter to charge your device.

Technical conducts

- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place the user and/or equipment at serious risk.
- Do not operate this appliance with a damaged adapter or cord.
- Do not push objects into any openings as damage to the equipment and/or electric shock may occur.
- Do not remove the appliance from the mains power supply by pulling the cord; pull the plug.

Operational conducts

- Never keep or use the unit in high temperature, moist environments and never exposed to sunlight. This product is not a toy. Never leave the equipment within reach of children. Close supervision is required when using this equipment near children.
- Never disassembly or refit the unit.
- Never shock, hit or drop the unit.

Technical conducts

- If any leakage goes into your eyes, never rub your eyes. Clean your eyes with water or get medical help.
- The unit will get hot during use, this is normal.



- Never cover the unit with paper or other things.
- Do not push any objects into openings as damage to the equipment may occur.
- Never Expose or dispose of in a fire.
- Do not use if it has been dropped or damaged in any way.
- Repairs to electrical equipment shall only be performed by qualified personnel. Improper repairs may place the user at serious risk.
- Do not use the product with wet hands.

- Keep the unit out of reach from children, this product is not a toy!
- ▶ Keep the unit free from dust, lint etc.





Operation

Get started

- 1. Connect product with digital devices via USB charging ports.
- 2. The LED power connector will lit and show the remaining power.
- 3. Disconnect product after devices are fully charged. Charge the power bank every 3 month to maintain its best function.

Power indicator	Battery Power
4 lights	76-100%
3 lights	51-75%
2 lights	26-50%
1 light	1-25%
0 lights	0

Operation



Trouble shooting

Pr	oblem	Solution
	owerbank will ot power on	Charge the powerbank and it will work normally after 2-3 minutes.
1.0	owerbank does ot charge	Ensure that the charging cable is properly connected to your mobile device.

Product name	PB5000
Capacity	5000 mAh
Output power	5V 2.1A / 5V 2.1A
Input power	5V 2A
Including in the packaging	1 x microUSB-cable
Dimension	140 x 65 x 8 mm
Weight	113 g

Other

- Copyright: This manual is the copyright of CI no 556998-9329. No part of this manual may be revised, copied or transmitted in any way without written permission from CI no 55698-9329.
- Recycling: This product's packaging materials are recyclable and can be reused. This product and the accessories packed together are the applicable product to the WEEE directive except batteries. Please dispose of any materials in accordance with your local recycling regulations.



Batteries should never be thrown away or incinerated but disposed of any accordance with your local regulations concerning chemical wastes.



- Law and Safety: The CE mark indicates that this product has been manufactured according to current regulations for electromagnetic fields, which means that it is safe to use if used according to safety instructions. The product is manufactured according to current regulations within the EU legislation, limiting the use of hazardous substances in electrical and electronic equipment.
- Statement: This manual does not provide any warranty or related declarations. All information in this manual including the product specification, pictures and literatures is just for reference, CI no 556998-9329 reserves the rights to update contents of this manual without further notice.

NORDIQZENZ Selected accessories

Box 57 435 21 Mölnlycke Sweden